Pocket Radio

AE 1506

PHILIPS

1

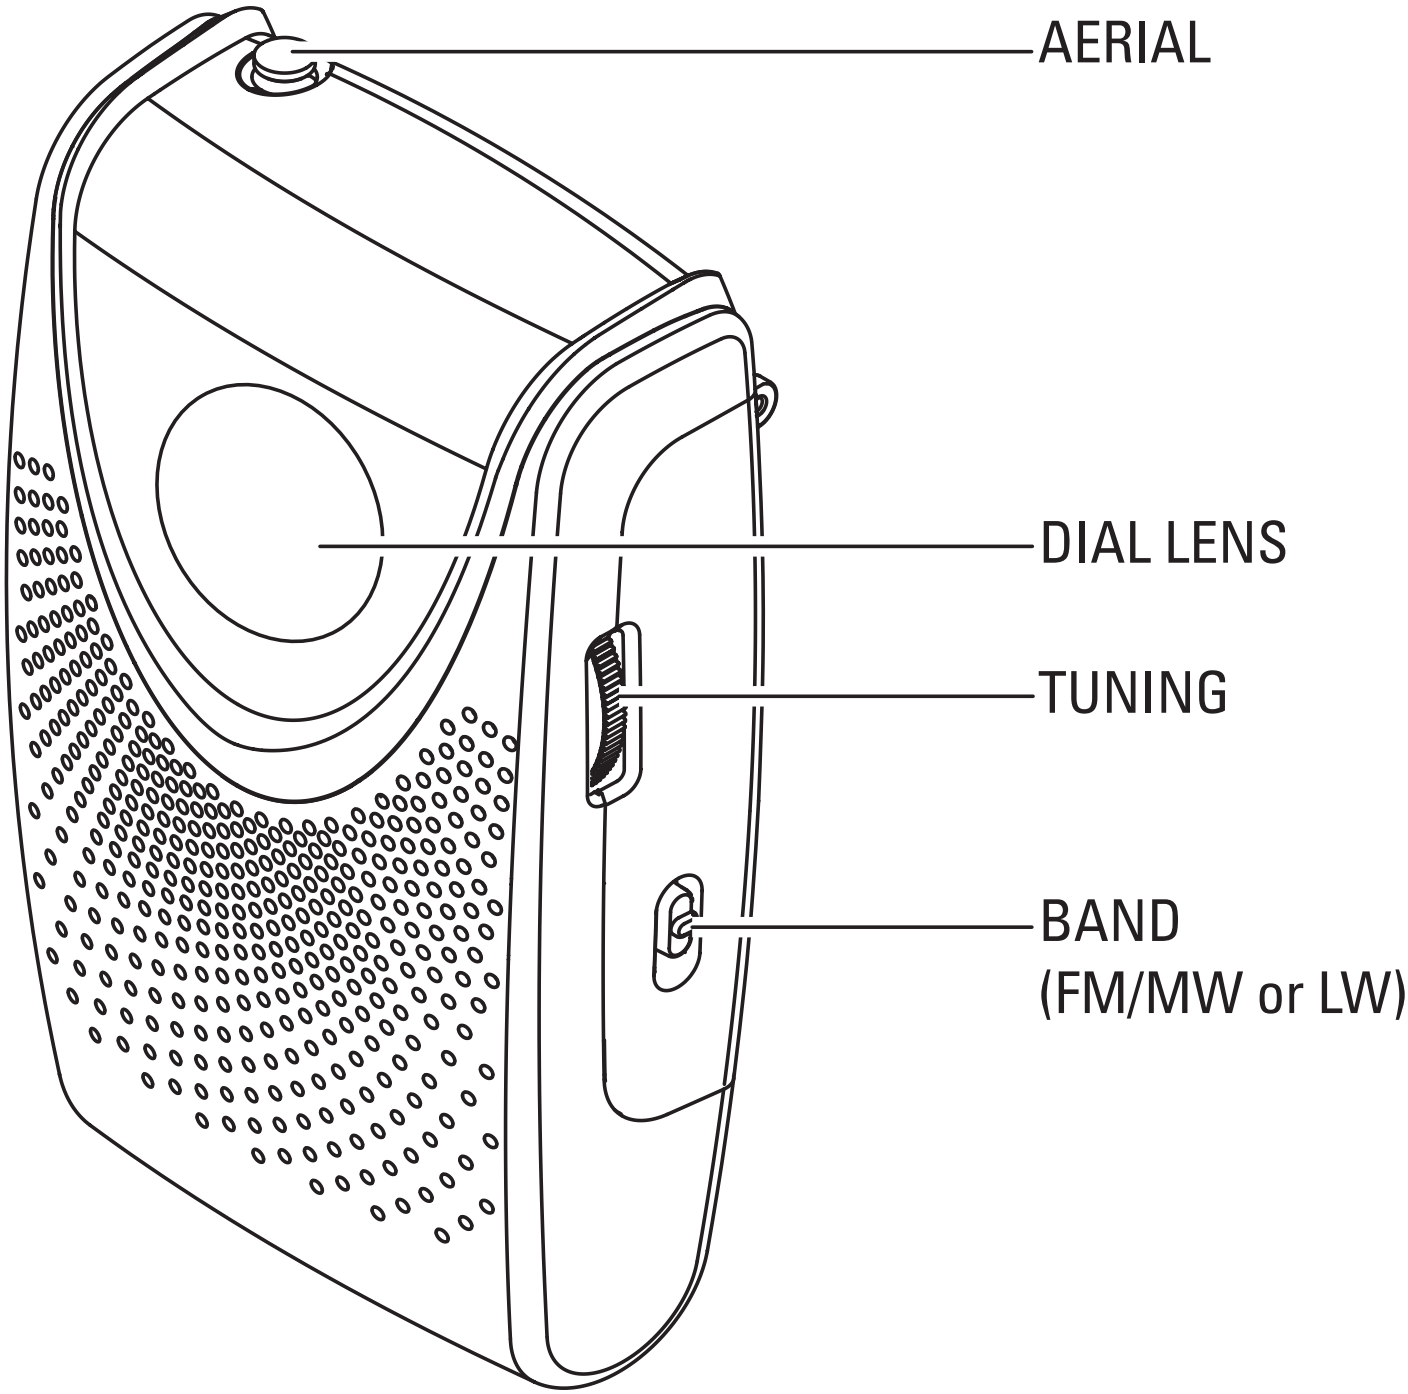

2

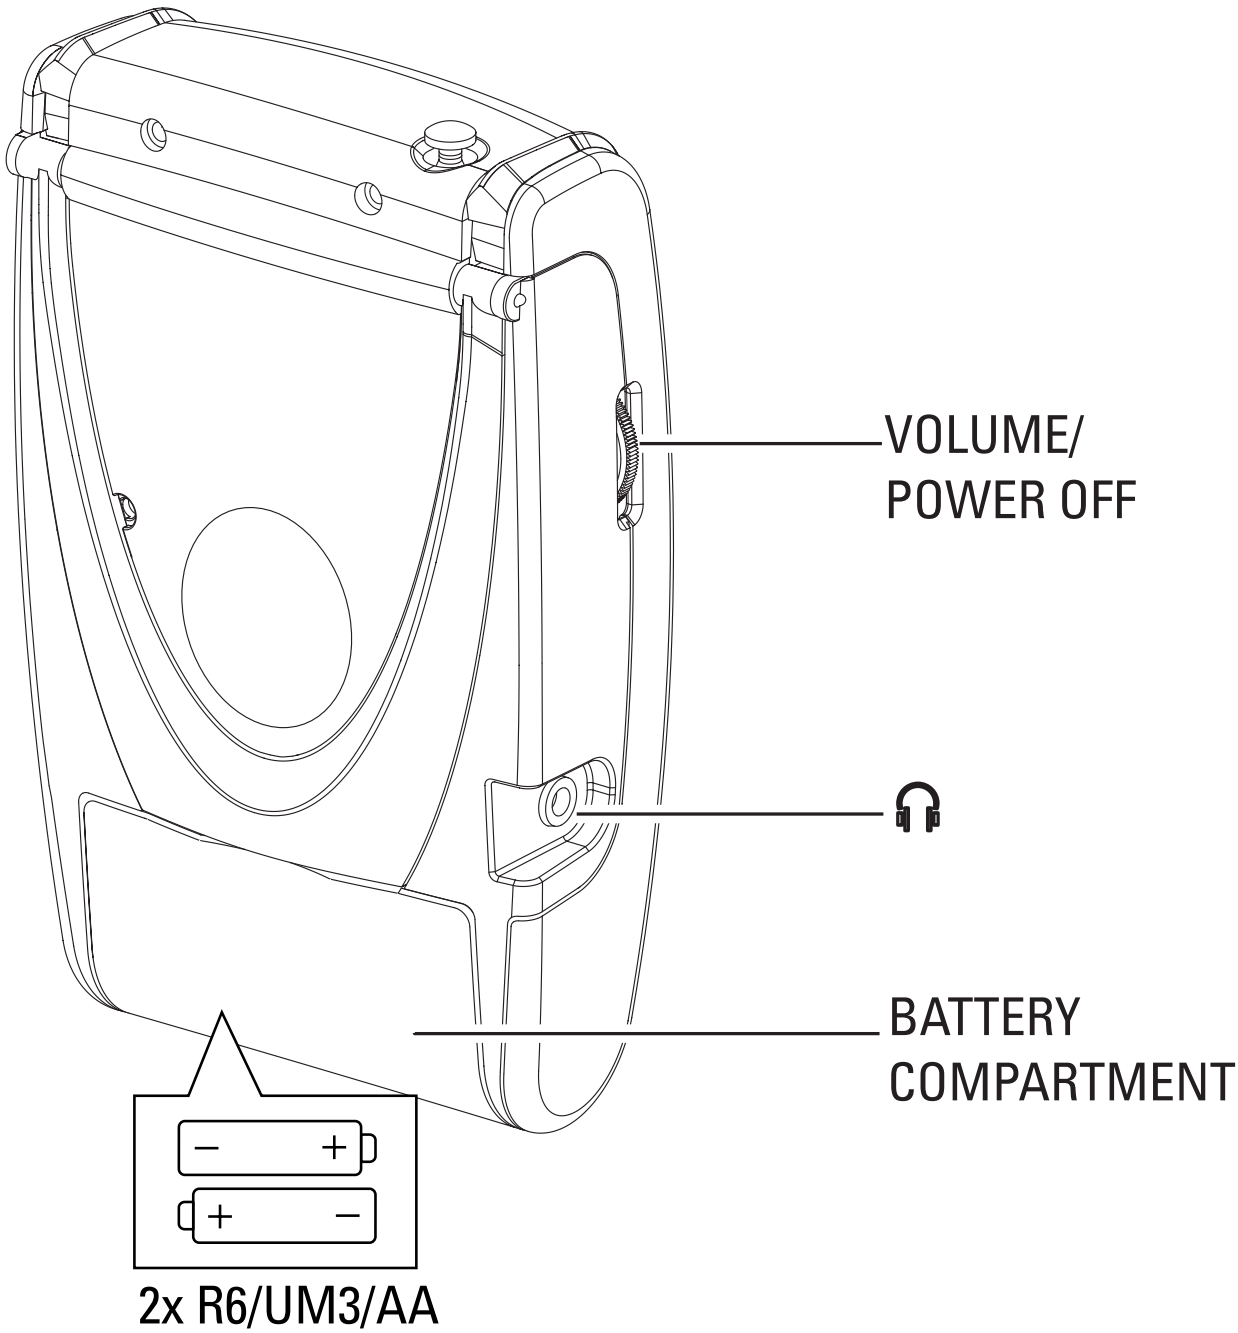

ENGLISH

POWER SUPPLY

Battery (not included)

- Open battery door and insert two alkaline batteries, type **R6**, **UM3** or **AA** as indicated inside the compartment.
- Remove the batteries from the set if they are exhausted or not to be used for a long time.
  Batteries contain chemical substances, so they should be disposed of properly.

RADIO RECEPTION

1. Turn **VOLUME/ POWER OFF** clockwise to switch on the radio.
- You will hear a small click when switching on.

2. Adjust the volume level with **VOLUME/ POWER OFF**.

3. For personal listening, connect headphones with a 3.5 mm plug to the 🎧 socket.
- The built-in speaker will then be muted.

4. Adjust the band switch to **FM/MW** or **LW** to select your waveband.

5. Tune to the desired radio station by turning the **TUNING** wheel.
- *For **FM**,* pull out the telescopic aerial. Reduce its length if the FM signal is too strong (very close to a transmitter).
- *For **MW** (or **LW**),* the set is provided with a built-in aerial. Turn the whole set to find the best position.

6. To switch off the set, turn **VOLUME/ POWER OFF** anti-clockwise until you hear a small click.

MAINTENANCE

- Use a soft damp cloth to wipe off dust and dirt. Don't use benzene or corrosives to clean the set.
- Don't expose the set to rain, moisture, sand or to excessive heat e.g. cars parked in direct sunlight.

TAKE CARE WHEN USING HEADPHONES

Hearing Safety:
Listen at a moderate volume. Use at high volume can impair your hearing!
Traffic Safety:
Do not use headphones while driving or cycling as you may cause an accident!

ENVIRONMENTAL NOTE

- The packaging has been minimized so that it is easy to separate into two materials: cardboard and plastic. Please observe the local regulations regarding the disposal of these packaging materials.
- Please inquire about local regulations on how to hand in your old set for recycling.

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: ***Under no circumstances should you try to repair the set yourself, as this will invalidate your guarantee.***

No power /sound

– *Wrong battery polarity*
• Insert batteries correctly

– *Batteries exhausted*
• Replace batteries

– *Volume is turned down*
• Turn up volume

– *Headphones still connected for speaker option*
• Disconnect headphones

Poor sound

– *Headphones plug not fully inserted*
• Insert plug fully

Severe radio hum/distortion

– *FM aerial not fully extended*
• Extend FM aerial fully

– *Set too close to TV, computer, etc.*
• Move set away from other electrical equipment

The model number can be found at the back of the set and the production number in the battery compartment.

This product complies with the radio interference requirements of the European Union.

English

Français

Español

Deutsch

Nederlands

Italiano

Português

Dansk

Svenska

Suomi

Ἑλληνικά

Meet Philips at the Internet
http://www.philips.com

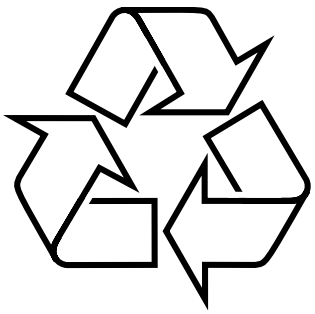

AE1506

Printed in China